


Installation Guide PH-Connection System

-  Apply sealing tape prior to installation of attic hatch!
Apply sealing tape to airtightness layer on site.

1 Certified design of the connection gap




1 Glue sealing tape in place:

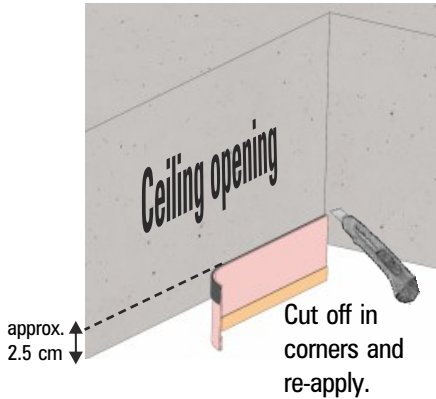


2 Install attic hatch (see Installation Guide Attic Hatch)

3 Push in insulation braid:

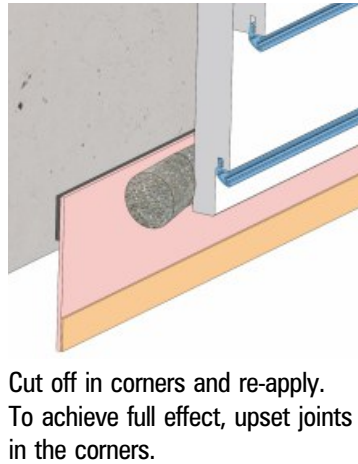

4 Close the gap:

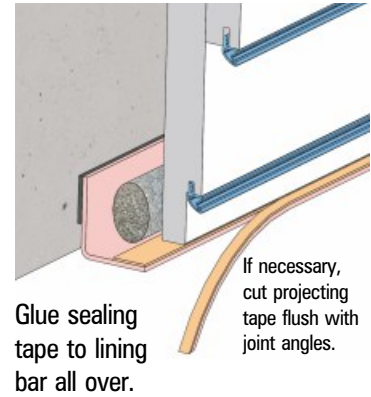

5 Apply cover profiles: (see Installation Guide Cover Profiles)

2 Certified design of the connection gap




1 Close installation boreholes:

Apply cover caps to the inside of the attic hatch.

2 Insulate the gap completely

Use funnel to gradually add the pour-in insulation right up to the top around the entire circumference.
(a gap of approx. 2 cm should be left on top)

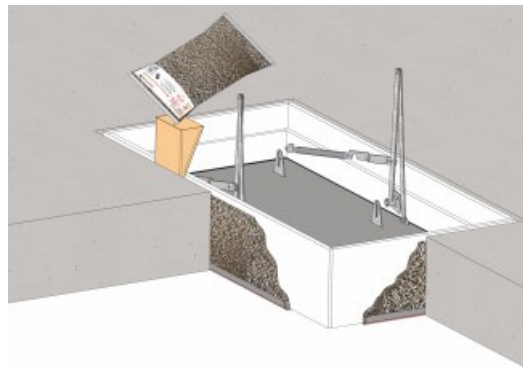


3 Certified design of the connection gap



1 Close the top gap:

Push in insulation braid flush around the entire circumference.

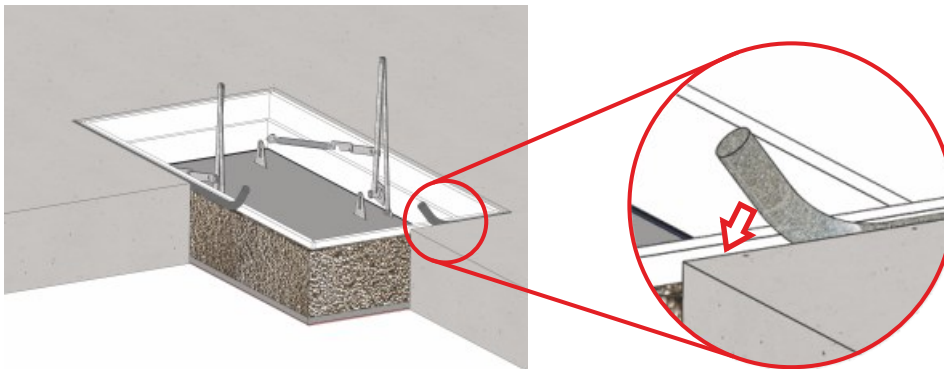

Only when the PH-Connection System is executed as described does it correspond to the passive house certification.