


Installation Guide cover profiles


Unpack and mount cover profiles only after completion of any other work on the ceiling!

- 1 Interlock frame:**
Interlock cover profiles to form a frame with the help of corner joints.

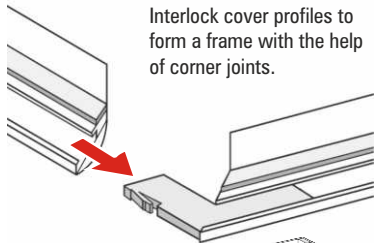


- 2 Attach frame by way of trial.**


- 3 Uncover adhesive tape:**

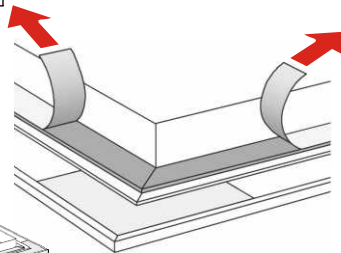

- 4 Mount cover profiles:**
Keep attic hatch closed and press frame from below onto clean lining bar and press firmly.

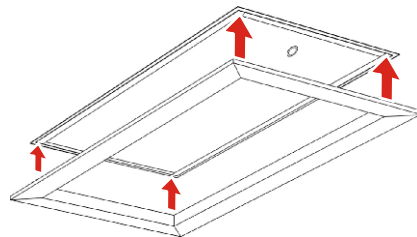

- 5 Secure architraves**
Screw in enclosed screws flush with bit:
- opening side 1x
- both longitudinal sides 2x
- distance to bottom edge 1.5 cm
- distance to corner 20 cm

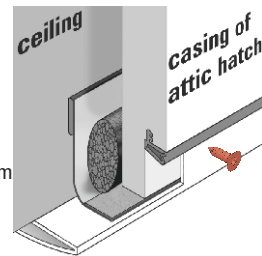

- 6 Remove protective foil from cover profiles bottom.**

