



# Installation Guide Ladder foot covers **GutHolz** Attic Stairs

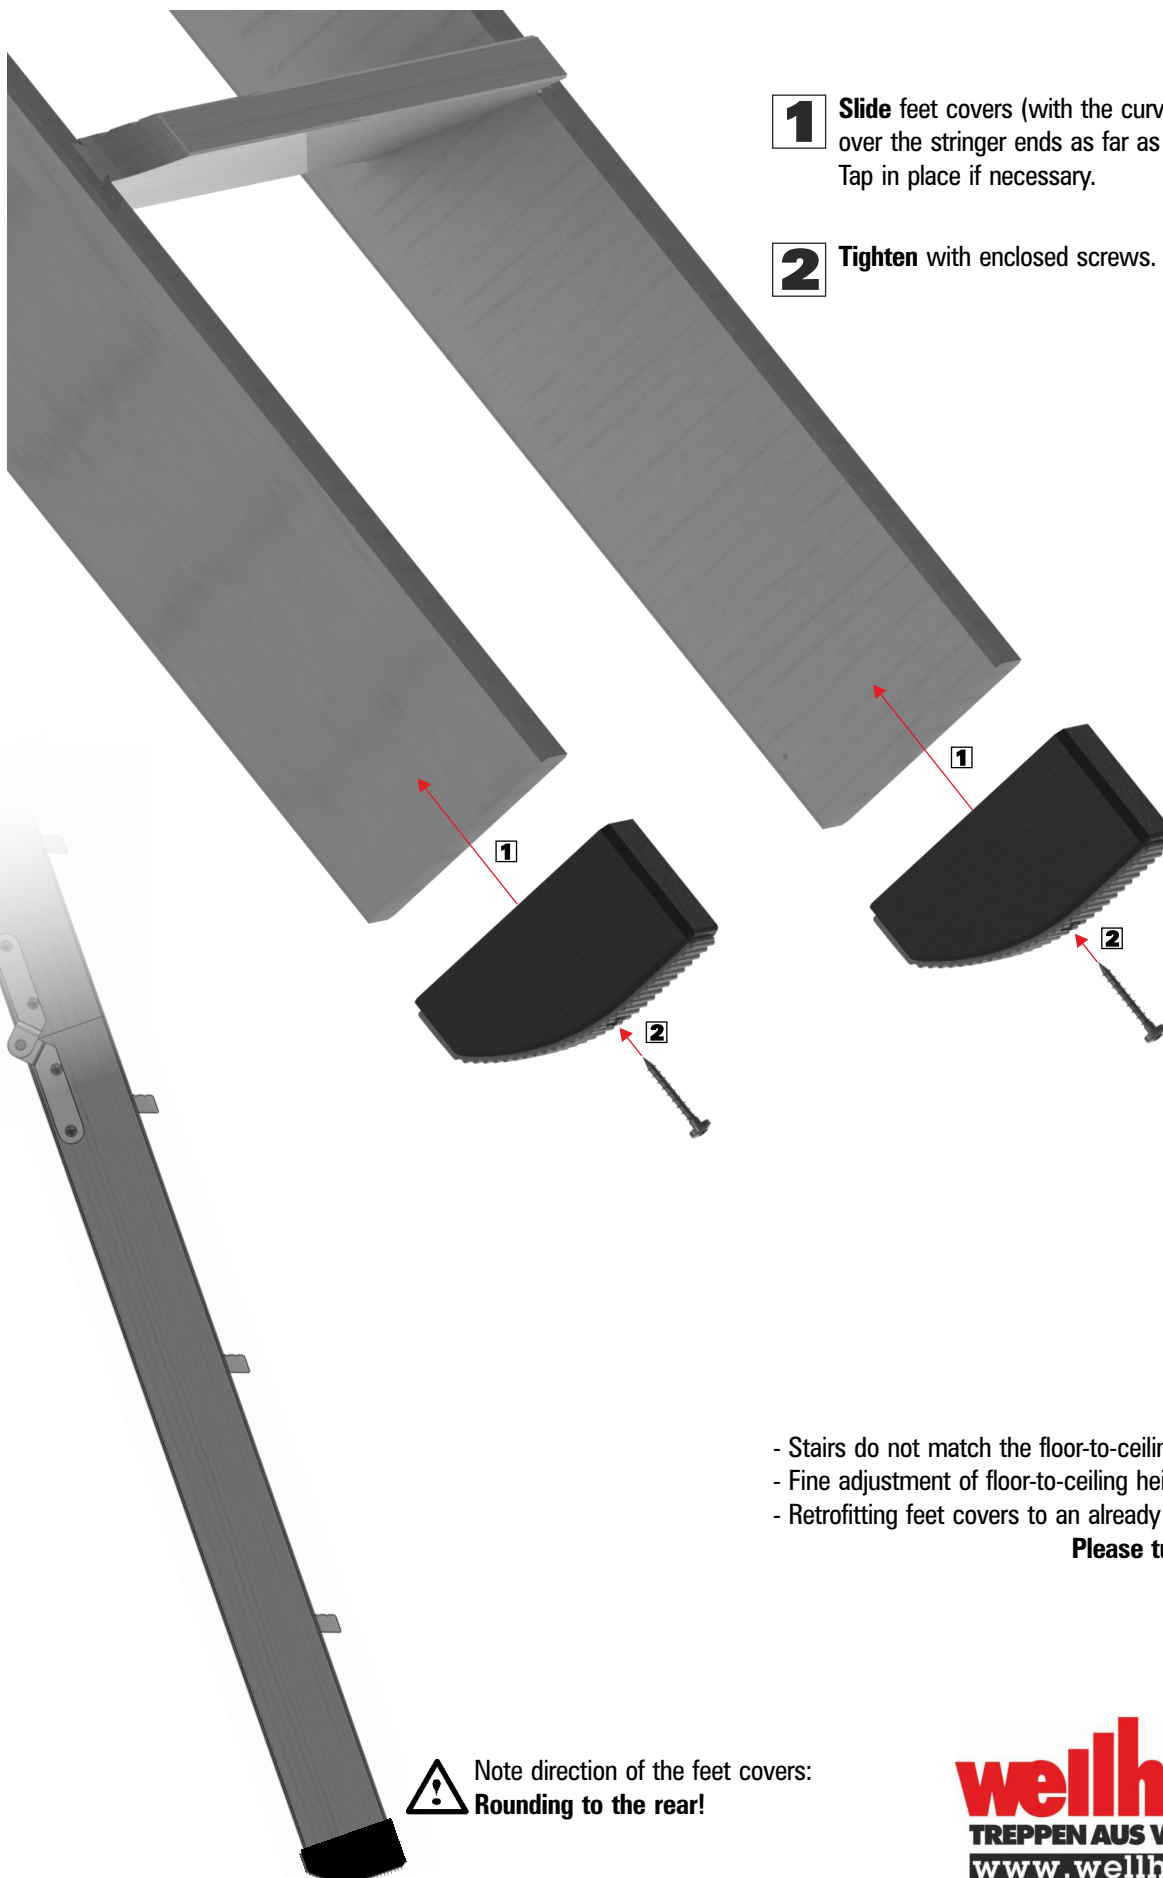

**1** Slide foot covers (with the curve to the rear) over the stringer ends as far as they will go. Tap in place if necessary.

**2** Tighten with enclosed screws.

- Stairs do not match the floor-to-ceiling height?
  - Fine adjustment of floor-to-ceiling height?
  - Retrofitting foot covers to an already installed stairs?
- Please turn page over!**


 Note direction of the feet covers:  
**Rounding to the rear!**

# Setting the correct floor-to-ceiling height

**GutHolz**  
Attic Stairs  
**AluDrei**  
Attic Stairs  
**StahlBlau**  
Attic Stairs




Adjust stringers in the lower supports until stair sections are in alignment.  
Only then tighten all screws.

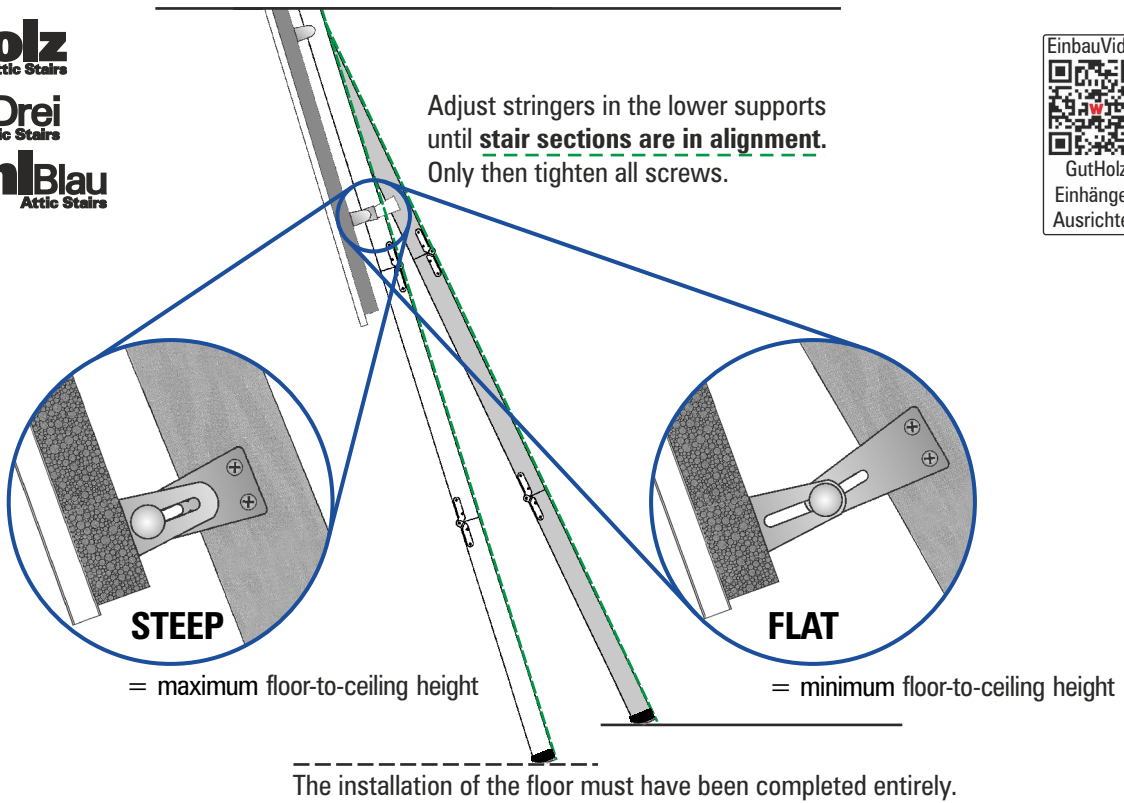

**!** If height adjustment fails to get stringers in alignment:

**A** Stairs too long:  
*Our recommendation:*  
Make a new order with  
correct floor-to-ceiling height.

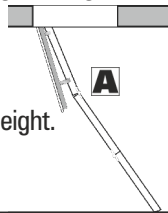

**B** Stairs too short:  
Make a new order with  
correct floor-to-ceiling height.





Or:




## Cutting to the correct length GutHolz Attic Stairs

**1** Measuring and marking:  
Select medium height adjustment. Fold-in bottom stair section: upper and middle stair sections must be flush. Measure at the forward stringer edge. Mark on lower stringers (**A - 45 mm!**).

Distance between floor and 1st step:

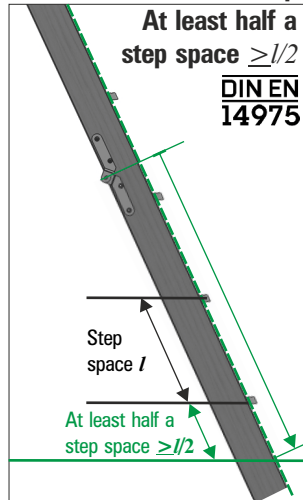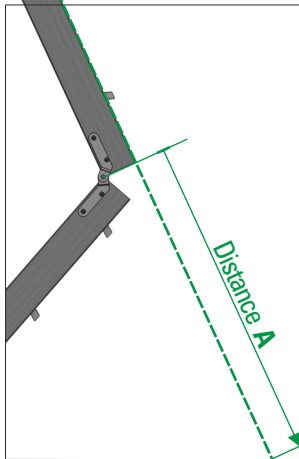

**2** Cut to length:  
Saw lower stringers  
at a right angle  
at distance **A - 45 mm**.

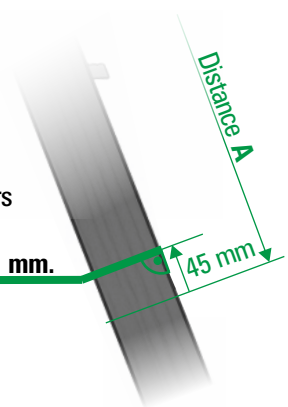

**3** After fitting the ladder feet covers:  
Fine adjustments to correct height  
(see above)

**weilhöfer**  
TREPPEN AUS WÜRZBURG